6 Systems

360 Systems White Paper Installing haneWIN NFS servers for Digicart E/EX series product.

NOTE: The haneWIN NFS Server version at the time of this writing was 1.2.60. https://www.hanewin.net

- 1. Create a folder somewhere on the local PC that will become the NFS share folder.
- 2. Install the haneWIN NFS Server software and launch the application using "Run as administrator".



3. In the haneWIN NFS Server window that opens, drag the folder you wish to share into the window. (In this example we use the folder c:\Storage\Digicart)

haneWIN NFS Server			– 🗆 X
File Edit View Help			
Folder	Options	Clients	
₹			
Ready on Port 2049			
File Home Share View			□ × ~ (?
$\leftarrow \rightarrow \checkmark \uparrow$ \blacksquare « Local Disk (>	Storage 🗸 진	🔎 Search Stor	age
This PC	Name	2	Date modified
3D Objects	Digicart	2	7/23/2021 8:53 AN
Cesktop			
🔮 Documents			
👆 Downloads			
👌 Music			
Pictures			
Videos			
Local Disk (C;)			
👝 New Volume (E:) 🔍 🗸 🦿)
1 item 1 item selected			

Systems.

4. A configuration window will pop up. In most cases, the default settings with nothing checked are fine. In some cases customers may need to make the folder public and/or restrict which Digicarts or computers can access the share by IP address.

Edit Exports		×		
Folder				
C:\Storage\Digicart\				
Options				
-alldirs Allow clients to mount subfolders				
-exec Set execute bit for all files				
☐ -i32 Limit inode size to 32 bits				
 Howercase Convert names of folders and files to lower case 	ase			
-readonly Readonly access				
Olienta use Windows (ANST) character set pot LITE 8				
Options with arguments				
-name: Visible name of folder on dients				
-maproot: Map root access to specified uid:gid				
-mapall: Map all clients to specified uid:gid				
$\hfill\square$ -umask: Use specified access mask for clients				
-range Client name/address list specifies ranges		2.2		
Names or IP Addresses of dients				
	Save	Cancel		
Server haneWIN NFS Server				×
File Edit View Help				
1 Entries Folder	Ontions	Client	r	
C:\Storage\Digicart	options	- Cilcin	<u> </u>	
Ready on Port 2049				

Systems

Optionally, check the "public" box to make the share more visable on the network, and / or specify an IP address range that is allowed to access the NFS share.

		\sim	
Ender			
C:\Storage\Digicart			
Onting			
-oublic -range			
=			
 -alldirs Allow clients to mount subfolders 			
-exec Set execute bit for all files			
-hide Entry visible on authorized dients only			
☐ -i32 Limit inode size to 32 bits			
\square -lowercase Convert names of folders and files to lower case			
I → public Export as start folder for WEBNFS			
-readonly Readonly access			
🦳 -w Clients use Windows (ANSI) character-set, not UTF-8			
Options with arguments			
-name: Visible name of folder on dients			
-maproot: Map root access to specified uid:gid			
-mapall: Map all clients to specified uid:gid			
-umask: Use specified access mask for clients			
✓ -range Client name/address list specifies ranges			
Names or IP Addresses of dients			
192.168.1.10 192.168.1.10			
	Save	Cancel	
haneWIN NFS Server			<u>20</u> 9
ile Edit View Help			
Entries			

- 5. The share should now be accessible to the Digcart E/EX. Please refer to the Digicart E/EX manual for more detailed information. Below are the basic steps.
 - a. Press the UTILITY button, scroll to MOUNT NETWORK DRIVE and press ENTER

X

19 Systems

- b. Select an appropriate drive path by using the scroll wheel and press ENTER. (Normally the first CURRENT DRV 3 PATH will show "NO PATH ASSIGNMENT" and can be used.)
- c. If there is more than one NFS server on the network, you will need to scroll to the IP address of the server you wish to use. If there is only one NFS server on the network, this step will be skipped.
- d. On the SELECT DRIVE PATH screen, use the scroll wheel to select the shared directory you wish to map and press ENTER.
- e. The share should be mounted and the Digicart will automatically build the folders 0 though 9 in the shared folder on the PC. You can then copy files to and from the Digicart using the UTILITY -> COPY ORGINAL function.

Troubleshooting:

- 1. For testing, turn off the Windows Firewall. In most cases, the first time haneWIN NFS Server is started, Windows Firewall will prompt to allow the application. Sometimes this does not happen and turning off the firewall will allow the connection. If this resolves the issue, follow the steps below to add the appropriate ports to the firewall.
- 2. In some cases the folder on the PC will need to be given special permissions. On the folder properties, Security tab, add both EVERYONE and ANONYMOUS LOGIN with Full Permissions.
- 3. Adding the "public" flag as mentioned above will sometimes increase the visibility to the Digicart if it cannot see or mount the path.

Windows Firewall Rules:

Note: This procedure may vary slightly in different versions of Windows but the ports needed will remain the same.

Go to Control Panel>System and Security> Windows Firewall > Advanced Settings.

- Select Inbound Rules > New Rule. Select Port. Click Next.
- Select TCP and in Specific Local Ports enter numbers 1058, 111, 2049. Click Next.
- In When Does This Rule Apply, uncheck Public. Click Next.
- Name the rule, for example "Hanewin TCP port exceptions". Click Next.
- Again, select Rules > New Rule. Select Port.
- This time select UDP. In Specific Local Ports enter the same port numbers 1058, 111, 2049. Click Next.
- In When Does This Rule Apply, uncheck Public. Click Next.
- Name the rule, for example "Hanewin TCP port exceptions". Click Next.